



ASSY, MOUNTING LEGS 36" HIGH
 AirRite TT Series
 Model 112

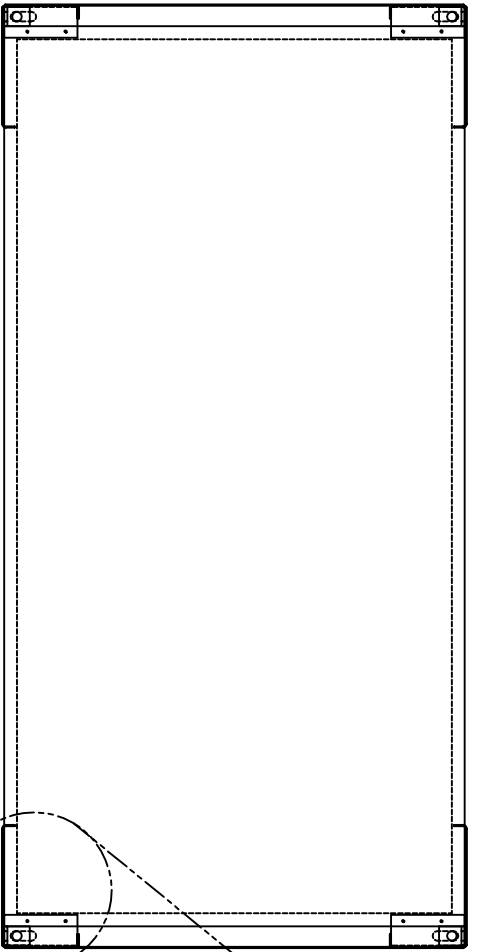

DETAIL A





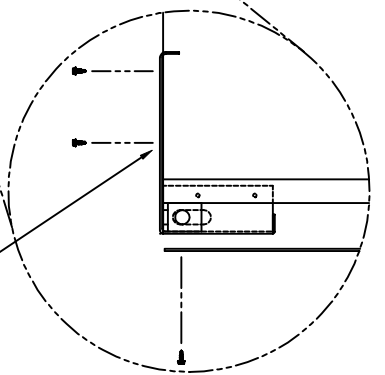


DRILL SCREW LEGS INTO SIDE OF CABINET.

BOLT LEGS TO THE SECTION
 THRU THE LIFTING LUGS.
 1/2" 13NC X 1.5" BOLTS.

DRILL SCREW MOUNTING LEG
 TO UNDERSIDE OF SECTION.

DETAIL B

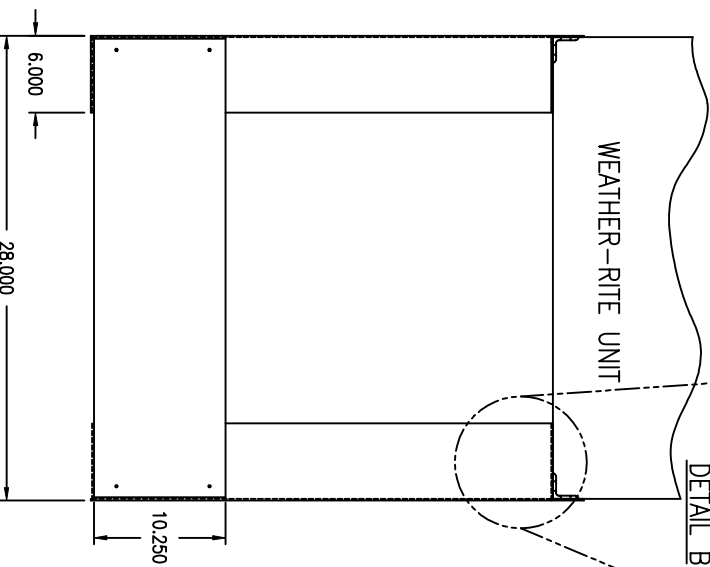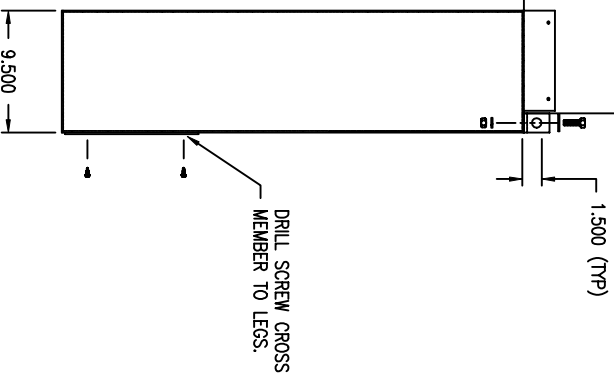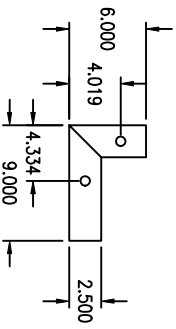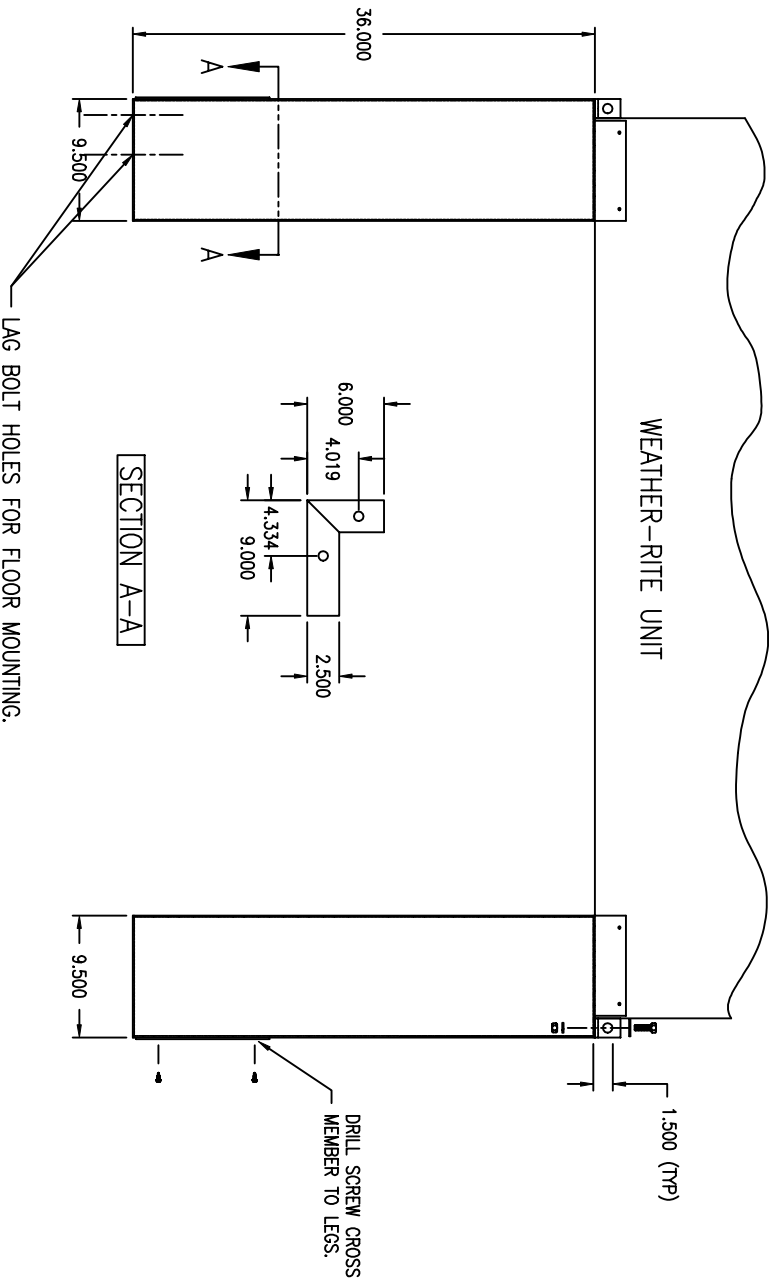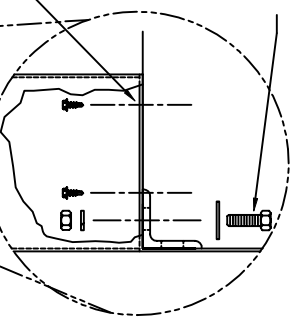

PRELIMINARY

NOTE:
 1.) DRAWING IS NOT TO SCALE.

Weather-Rite Inc.