



ASSY, MOUNTING LEGS 36" HIGH
 AirRite TT Series
 Model 212

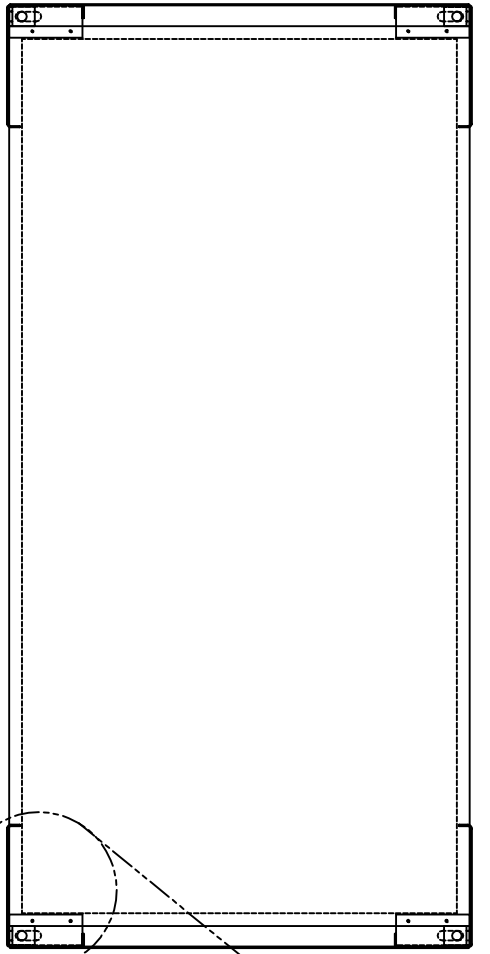


DETAIL A

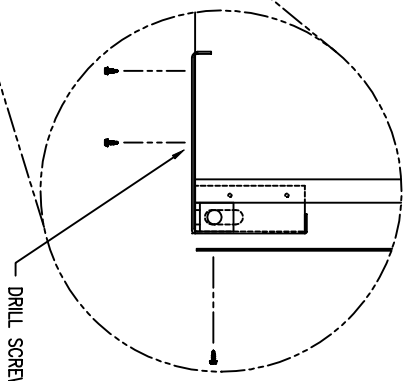


DRILL SCREW LEGS INTO SIDE OF CABINET.


BOLT LEGS TO THE SECTION THRU THE LIFTING LUGS. 1/2" 13NC X 1.5" BOLTS.

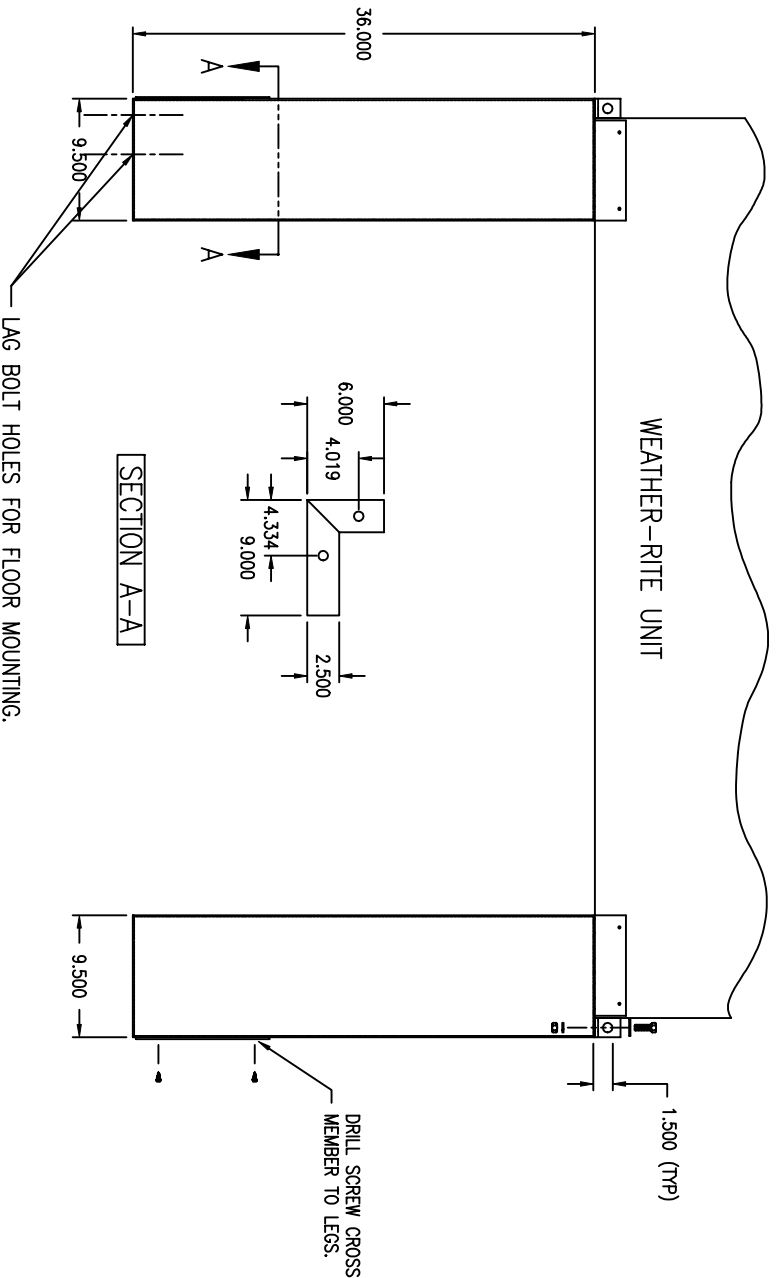

WEATHER-RITE UNIT

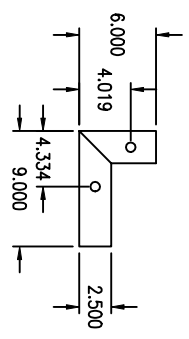


SECTION A-A

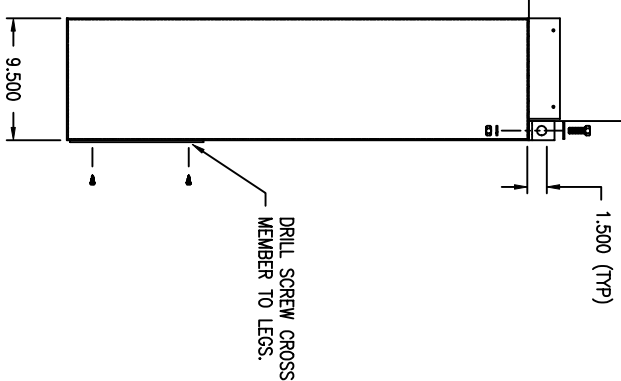

DRILL SCREW CROSS MEMBER TO LEGS.


1.500 (TYP)

DRILL SCREW MOUNTING LEG TO UNDERSIDE OF SECTION.

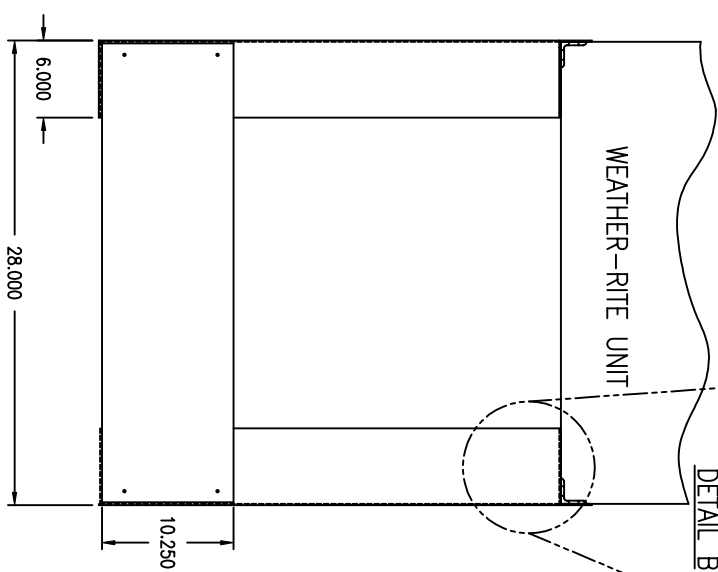

WEATHER-RITE UNIT

DETAIL B

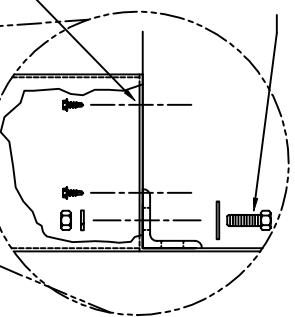

NOTE:
 1.) DRAWING IS NOT TO SCALE.

PRELIMINARY

Weather-Rite Inc.