



ASSY, MOUNTING LEGS 36" HIGH  
 AirRite TT Series  
 Model 218

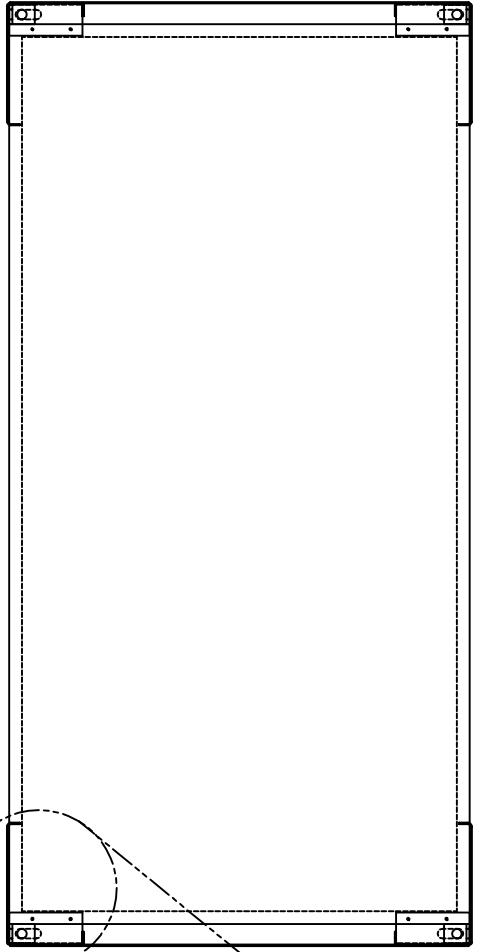

DETAIL A





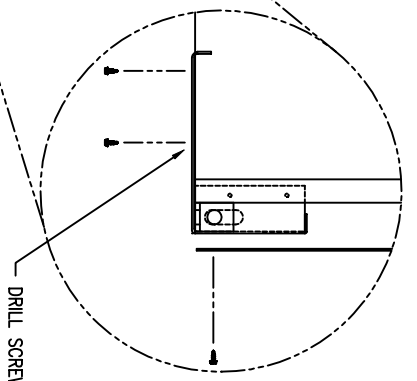


DRILL SCREW LEGS INTO SIDE OF CABINET.

BOLT LEGS TO THE SECTION THRU THE LIFTING LUGS. 1/2" 13NC X 1.5" BOLTS.

DRILL SCREW MOUNTING LEG TO UNDERSIDE OF SECTION.

DETAIL B

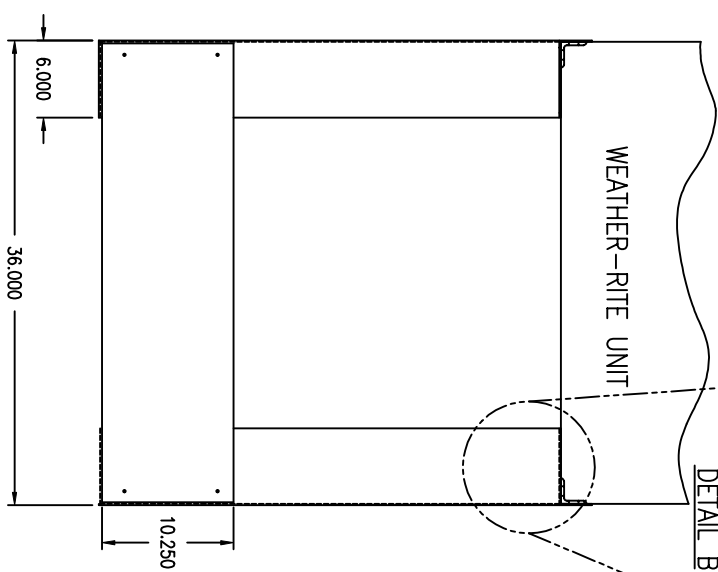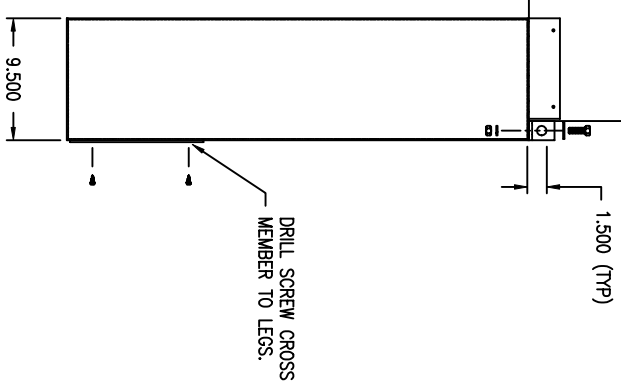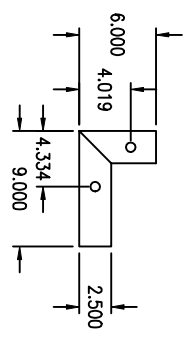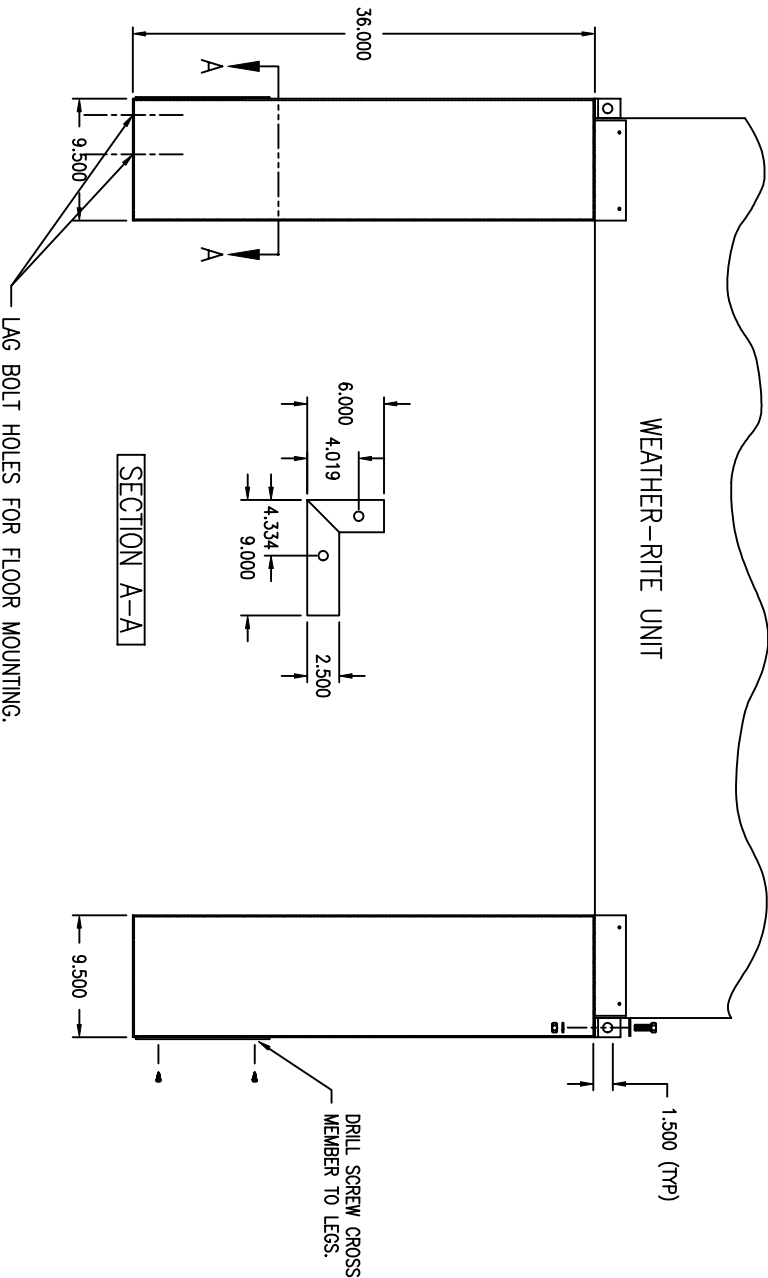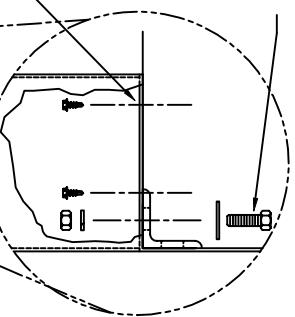

PRELIMINARY

NOTE:  
 1.) DRAWING IS NOT TO SCALE.

*Weather-Rite Inc.*